


Installation Instructions:

1. Identify the correct mounting shaft size needed for your application.
 (2" Receiver) make sure large sleeve is installed on mounting shaft.
 (1 1/4" Receiver) remove large sleeve from mounting shaft.
2. Identify and align correct mounting hole on Hitch step with the factory hitch, apply appropriate size hitch pin (Not supplied).
Note: It is recommended that a locking hitch pin be used to prevent theft.
3. For proper wiring installation, we suggest that you convert your vehicle's hitch end wire to a 4-Way Flat Connector (Vehicle end) before you install the LED hitch step. The conversion harness (as simulated below) is available at any auto parts store.
4. Once installation complete, make sure lighting functions are working properly.

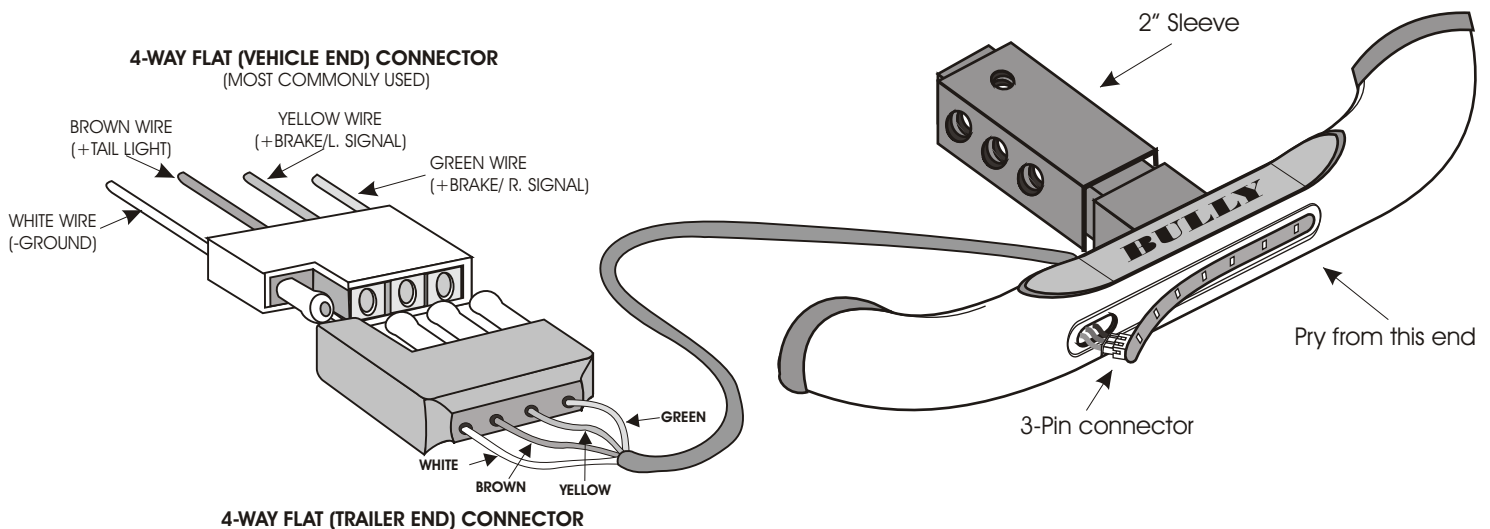

LED Replacement Instructions:

1. To replace the LED strip; gently pry the strip from the right side.
2. Disconnect the 3-pin connector and remove the LED strip.
3. Clean area thoroughly with rubbing alcohol or water.
4. Connect LED strip the way as removed from the original part.

Technical Help:

Toll Free: 1-800-237-7560
 Email: customerservice@pilotautomotive.com
 LED Replacement No: CR-600L-LED