


Installation Instructions:

1. Identify the correct mounting shaft size needed for your application.
(2" Receiver) make sure large sleeve is installed on mounting shaft.
(1 1/4" Receiver) remove large sleeve from mounting shaft.
2. Identify and align correct mounting hole on Hitch step with the factory hitch, apply appropriate size hitch pin (Not supplied).

Note: It is recommended that a locking hitch pin be used to prevent theft.

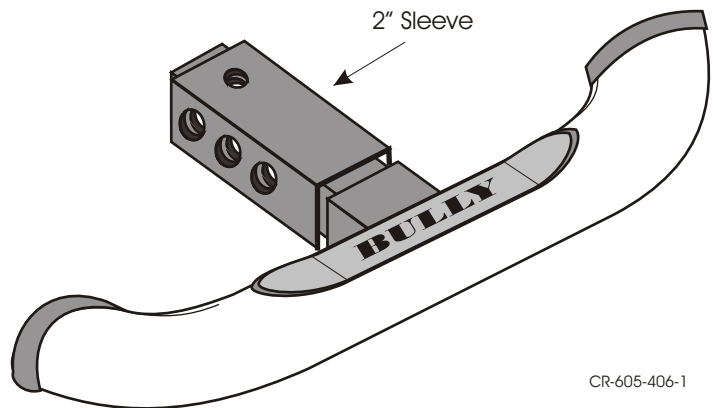

Technical Help:

Toll Free: 1-800-237-7560

Email: customerservice@pilotautomotive.com

CR-605-406-1