




# INSTALLATION INSTRUCTIONS

## Sport Truck Pedal Pads BBS-2101

**WARNING:** BEFORE INSTALLATION PARK THE CAR SAFELY. TAKE THE KEYS OUT OF THE IGNITION AND APPLY THE PARKING BRAKE.

AFTER INSTALLATION, CHECK THE PEDAL'S MOUNTING MECHANISM PERIODICALLY TO INSURE PROPER FIT AND SAFETY OF THE PEDALS.

**ADVERTENCIA:** ANTES DE LA INSTALACION: ESTACIONE EL VEHICULO EN UN LUGAR SEGURO, RETIRE LAS LLAVES DEL ENCENDIDO, PONGA EL FRENO DE MANO. DESPUES DE LA INSTALACION: REVISE EL MECANISMO DE MONTAJE DE LOS PEDALES PERIODICAMENTE PARA VER SI ESTAN BIEN AJUSTADOS, POR RAZONES DE SEGURIDAD.

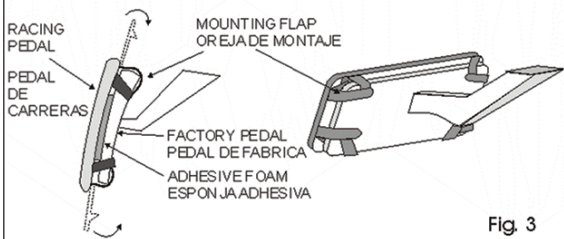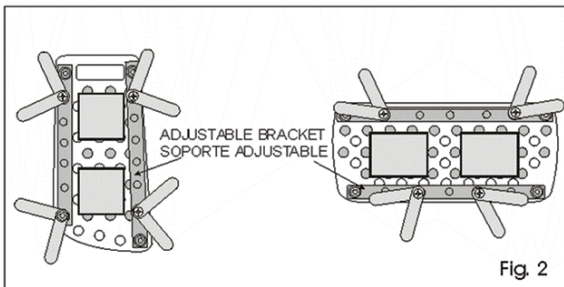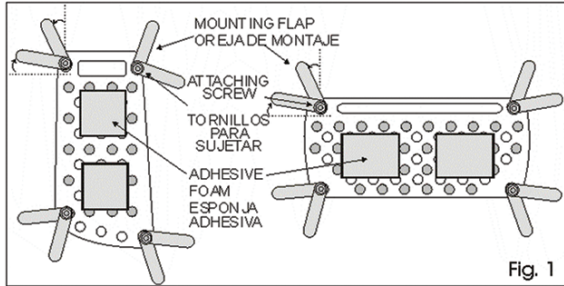

### INSTALLATION INSTRUCTIONS:

1. ATTACH THE MOUNTING FLAPS TO THEIR ACCURATE MOUNTING LOCATIONS ON THE BACK OF THE SPORT PEDALS CORRESPONDING TO THE SHAPE AND THE SIZE OF THE FACTORY PEDAL. APPLY THE SUPPLIED SCREWS/NUTS THROUGH THE HOLES ON THE PEDAL. ADJUST THE FLAPS TO A PROPER ANGLE AGAINST THE VERTICAL/HORIZONTAL LINE, THEN FIRMLY TIGHTEN THE ATTACHING SCREWS TO FIX THE FLAPS TO THEIR MOUNTING POSITION. (FIG 1)
2. FOR THE SMALLER SIZE PEDALS, USE THE SUPPLIED ADJUSTABLE BRACKETS AND THE SMALL ROUND HEAD SCREWS TO MOUNT THE FLAPS TO THE RIGHT LOCATION. (FIG 2)
3. PLACE THE SPORT PEDAL ON THE CENTER TOP OF THE FACTORY PEDAL AND APPLY THE ADHESIVE FOAM IN BETWEEN. BEND THE TOP FLAPS TO THE REAR OF THE FACTORY PEDAL SO THE FLAPS WILL TIGHTLY GRASP AGAINST THE EDGE OF THE FACTORY PEDAL. BEND THE SIDE FLAPS AND THE BOTTOM FLAPS IN THE SAME WAY. (FIG 3)
4. STEP ON THE PEDALS TO TEST THE PROPER FIT. THE SPORT PEDAL SHOULD HAVE NO RELATIVE MOVEMENT AGAINST THE FACTORY PEDAL.

### INSTRUCCIONES DE INSTALACION:

1. ENSAMBLE LAS OREJAS DE MONTAJE A SU POSICION CORRECTA DE LA PARTE TRASERA DEL PEDAL DE CARRERAS QUE CORRESPONDA A LA FORMA Y MEDIDA DEL PEDAL DE FABRICA, UTILIZE LOS TORNILLOS EN LOS AGUJEROS DEL PEDAL, AJUSTE LAS OREJAS EN EL ANGULO APROPIADO CONTRA LA LINEA VERTICAL/HORIZONTAL, DESPUES APRIETE FIRMEAMENTE LOS TORNILLOS EN SU POSICION (FIG 1)
2. PARA LOS PEDALES DE MEDIDA MAS PEQUENA, USE LOS SOPORTES AJUSTABLES Y LOS TORNILLOS PEQUENOS DE CABEZA REDONDA, PARA MONTAR LAS OREJAS EN SU POSICION CORRECTA (FIG 2)
3. COLOQUE EL PEDAL DE CARRERAS EN EL CENTRO Y LA PARTE SUPERIOR DEL PEDAL DE FABRICA Y COLOQUE LA TELA ADHESIVA EN MEDIO. DOBLE LAS OREJAS SUPERIORES HACIA LA PARTE TRASERA DEL PEDAL DE FABRICA PARA QUE LAS OREJAS AGARREN FUERTEMENTE EL BORDE DEL PEDAL DE FABRICA, DOBLE LAS OREJAS LATERALES E INFERIORES EN LA MISMA DIRECCION. (FIG 3)
4. PISE EL PEDAL PARA PROBAR QUE AJUSTA APROPIADAMENTE. EL PEDAL DE CARRERAS NO DEBE DE TENER NINGUN MOVIMIENTO RELATIVAMENTE CONTRA EL PEDAL DE FABRICA.